



Oil Filter HU 711/6 z  
EM-10121



Oil Filter HU 514 y  
EM-10122



Oil Filter HU 514 x  
EM-10123



 
Oil Filter HU 721/3 x  
EM-10124



Oil Filter HU 6008 z  
EM-10125



Oil Filter HU 926/5 y  
EM-10126

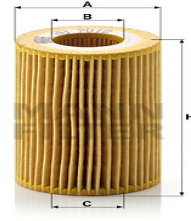


Oil Filter HU 7010 z  
EM-10127




Oil Filter H 829/1 x  
EM-10128



 
Oil Filter HU 715/6 x  
EM-10129

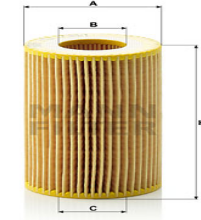


Oil Filter HU 718/1 k  
EM-10130

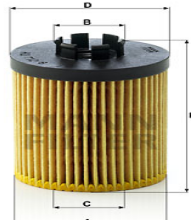 

Oil Filter HU 712/8 x  
EM-10131

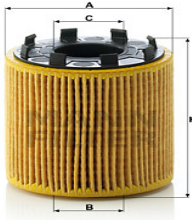 


Oil Filter HU 713/1 x  
EM-10132

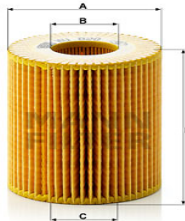 

Oil Filter HU 820 x  
EM-10133



 Oil Filter HU 611/1 x  
EM-10134

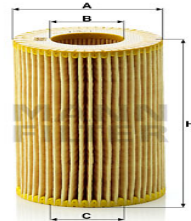


Oil Filter HU 718/1 n  
EM-10135




Oil Filter W 712  
EM-10136



 
Oil Filter HU 938/1 x  
EM-10137

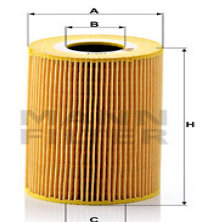


Oil Filter HU 848/1 x  
EM-10138

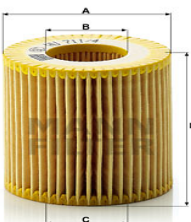 

Oil Filter HU 711/4 x  
EM-10139

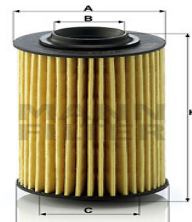 

Oil Filter HU 69/3 x  
EM-10140

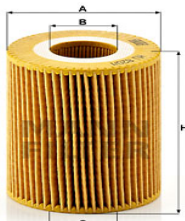 


Oil Filter HU 820/1 y  
EM-10141



Oil Filter W 712/80  
EM-10142



 Oil Filter HU 719/8 x  
EM-10143

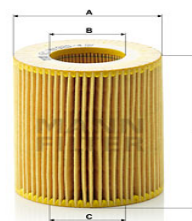

Oil Filter HU 925/4 x  
EM-10144